

## Changeable blade for EASY A4 trimmer



### Blade for EASY A4 trimmer

- Changeable blade for EASY A4 trimmer
- Changeable blade closed in special casing and sliding out of the casing while pressuring the casing
- Exchanging of the blade: 1) Move the casing with blade to the runner channel. 2) Carefully shift the plastic casing in order to remove it 3) Place the cover with new blade in runner's channel and move along the runner. Attention: Be careful with blade operation. Keep away from children.